Publication No. 1F6135
15JAN03

INSTALLATION INSTRUCTIONS
for the
CASSETTE OPENER SPROCKET KIT
for the
Kodak X-Omat MULTILOADER 7000
Service Code: 3444
Kodak X-Omat MULTILOADER 300/300 PLUS
Service Codes: 3058, 3511
Kodak MINILOADER 2000/2000P
Service Codes: 3577, 3479

Important
Qualified service personnel must install this kit.

HEALTH IMAGING

Confidential
Restricted Information
© Eastman Kodak Company, 2003

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

CASSETTE OPENER SPROCKET KIT 9212416 includes:

Part No.	Description	Quantity
9212413	SPROCKET	1
4276310	SETSCREW	1
9405971S	KEY	1

Installing the Kit

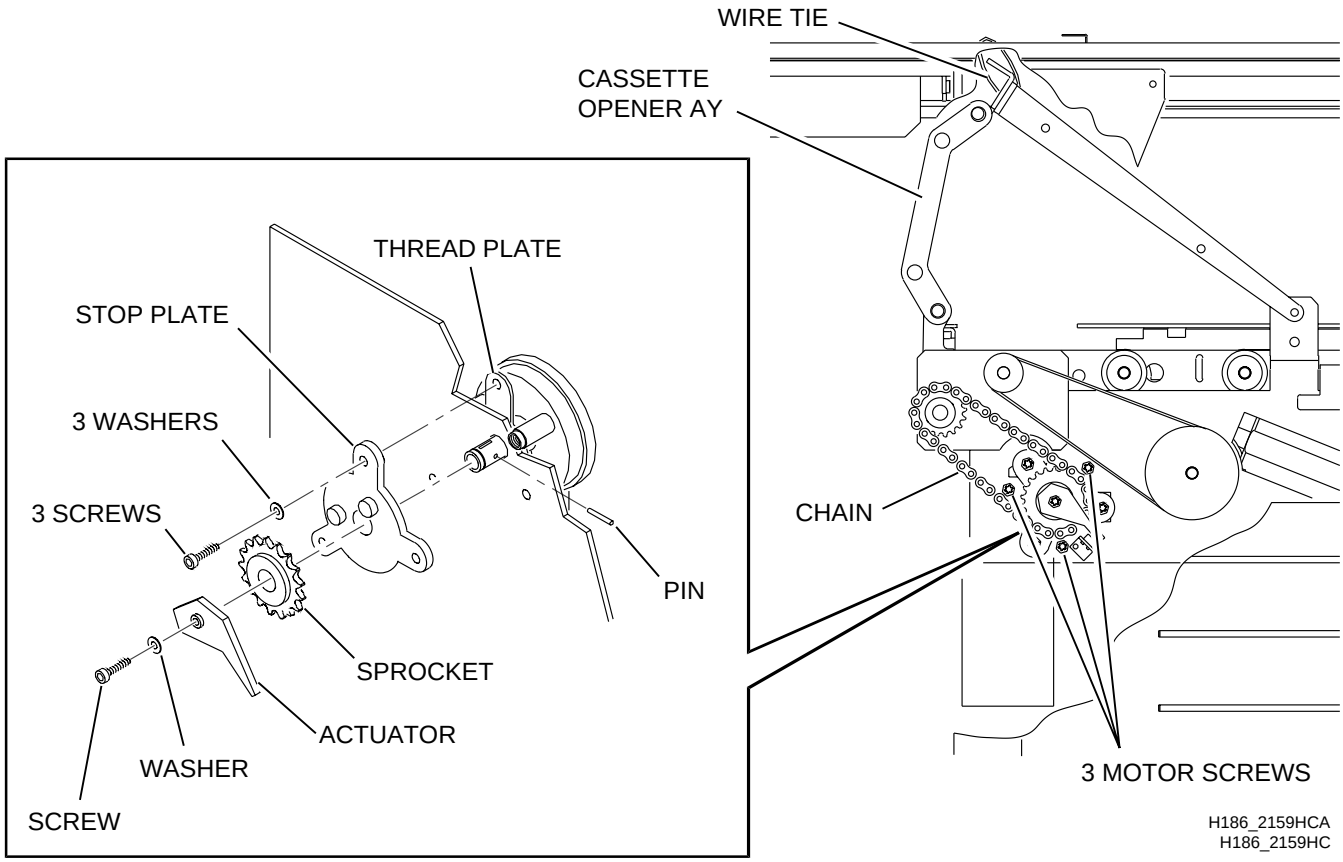

Warning

Dangerous Voltage

[1] De-energize the equipment.

[2] Use a WIRE TIE to hold the CASSETTE OPENER AY in the up position.

[3] Remove:

- SCREW
- WASHER
- ACTUATOR

[4] Loosen the 3 MOTOR SCREWS.

[5] Remove the CHAIN.

[6] Remove and discard:

- SPROCKET
- PIN
- 3 SCREWS
- 3 WASHERS
- STOP PLATE

Note

It is not necessary to remove the THREAD PLATE.

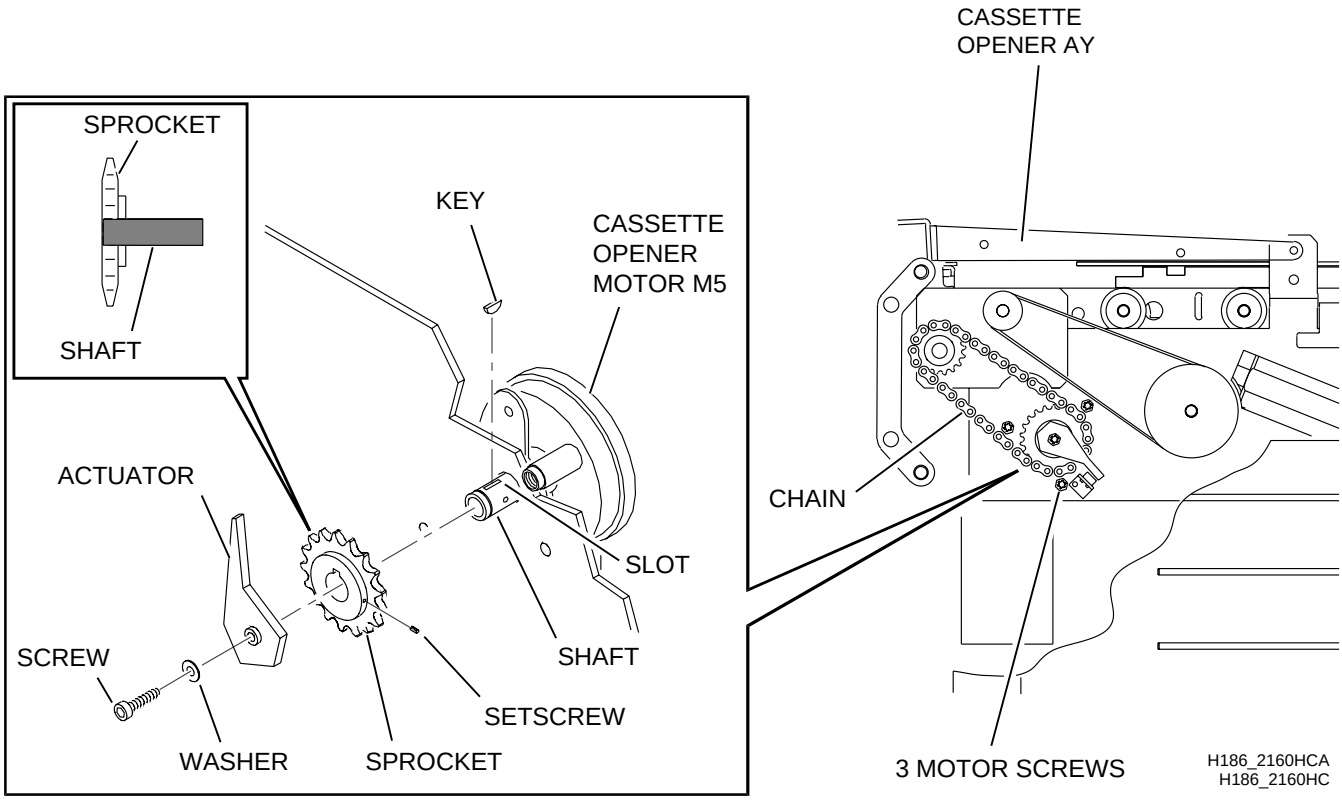

Caution

Prevent the CASSETTE OPENER AY from falling.

[7] Remove the WIRE TIE that you installed in Step 2.

[8] Place the CASSETTE OPENER AY in the bottom position.

Warning

Dangerous Voltage

[9] Energize the equipment.

[10] Using the “Service Software”, operate the CASSETTE OPENER MOTOR M5 until the SLOT is at the top position.

[11] De-energize the equipment.

[12] Install:

- new KEY
- CHAIN
- new SPROCKET

[13] Align the SPROCKET with the end of the SHAFT.

[14] Install and tighten the new SETSCREW.

[15] Install ACTUATOR in the up position.

[16] Install:

- WASHER
- SCREW

[17] To apply tension to the CHAIN, manually move the CASSETTE OPENER MOTOR M5 to the right.

[18] Tighten the 3 MOTOR SCREWS.

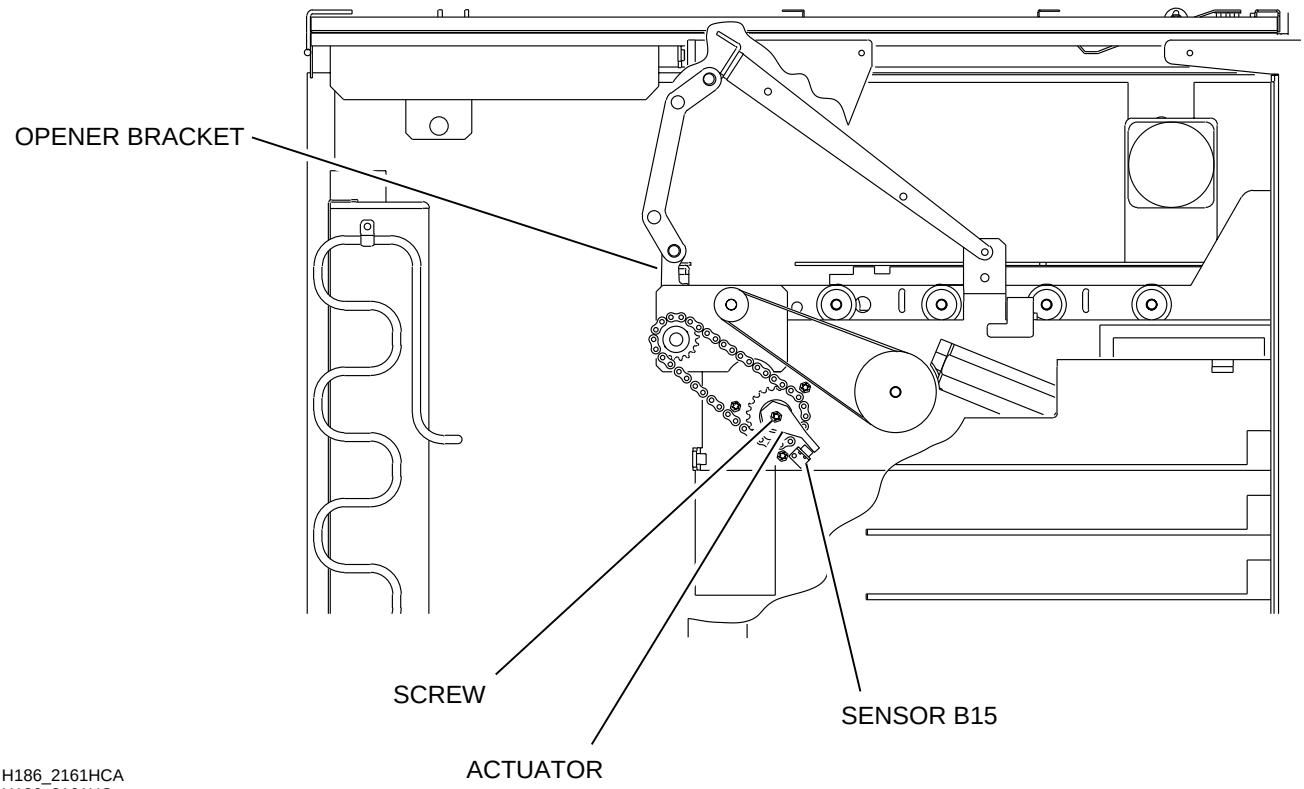

H186_2161HCA
H186_2161HC

Warning

- Dangerous Voltage
- Moving Parts

[19] Energize the equipment.

[20] Is the OPENER BRACKET vertical?

Yes	No
Advance to Checking the Operation.	Continue to Step 21

[21] Using the “Service Software”, select “Down” from “Cassette Opening (M5)”.

[22] Loosen the SCREW and Adjust the ACTUATOR clockwise or counterclockwise.

[23] Tighten the SCREW.

[24] Using the “Service Software”, select “Up” from “Cassette Opening (M5)”.

[25] Is the OPENER BRACKET vertical?

Yes	No
Advance to Checking the Operation.	Do Step 21 to Step 25 until OPENER BRACKET is vertical.

Checking the Operation

[1] Check that the equipment is operating correctly.

Publication History

Publication Date	Publication No.	ECO No.	Changed Pages	File Name	Notes
15JAN03	1F6135	----	----	1f6135.fm	New Publication

Kodak and *X-Omat* are trademarks.

Printed in U.S.A. • 1f6135.fm

EASTMAN KODAK COMPANY
Rochester, NY 14650

HEALTH IMAGING